

Mitras LX7

Programming Guide




Valid from firmware-version 1.00

As of 2016-11-21

Table of Contents

PREFACE	4
GET THE MOST OUT OF YOUR GHL PRODUCT	4
ABOUT THIS PROGRAMMING GUIDE	4
SAFETY INSTRUCTIONS	5
INTENDED USE	5
1 CLOCK	6
1.1 TIME & DATE	6
1.2 LOCATION	6
2 ILLUMINATION	6
2.1 ADJUSTING AN ILLUMINATION RUN ON THE LUMINAIRE	7
2.1.1 <i>Settings for the Slave Light</i>	7
2.1.2 <i>Settings for Master and Stand Alone Lights</i>	7
2.2 MANUAL ILLUMINATION	8
2.3 CLOUDS	9
2.3.1 <i>Settings for the Slave Light</i>	9
2.3.2 <i>Settings for Master and Stand Alone Light</i>	9
2.4 MOON	9
2.5 RAINY DAYS	11
2.6 THUNDERSTORMS	11
2.7 LIGHT DEMO	12
2.8 ACCLIMATION	12
3 EXTRAS	13
3.1 INFO & SUPPORT	13
3.2 LANGUAGE	13
3.3 DISPLAY	13
3.4 MAINTENANCE	14
4 SYSTEM	14
4.1 FACTORY SETTINGS	14
4.2 PIN	14
4.3 ENERGY OPTIONS	14
4.4 WIRELESS	15

Here is the menu structure of the *Mitras LX7*. These are the options available to you when you operate the *LX7* through the device's *Control Pad*. (This structure is also similar to the layout seen in the PC-Software, *GCC*.)

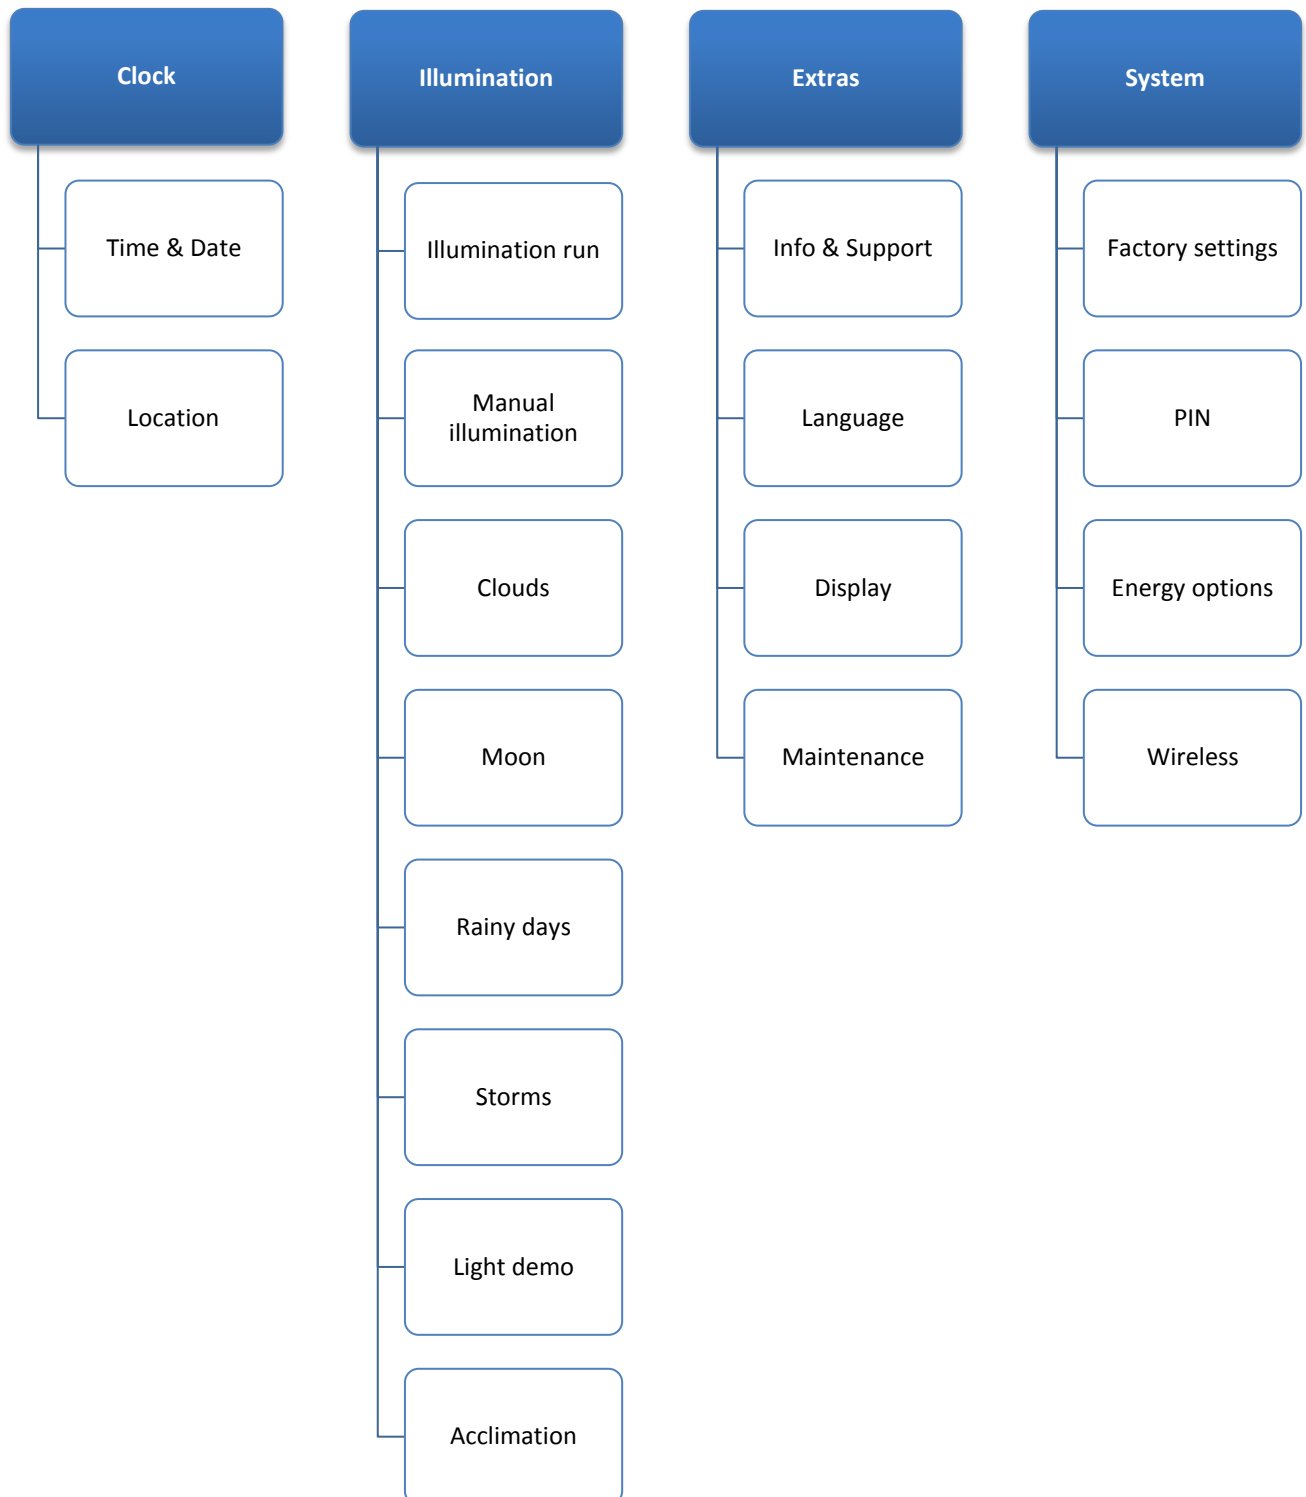

Preface

This manual is a supplement to the *Mitras® LX7* Instruction manual. **This Programming Guide is based on these operating instructions and cannot replace them in any circumstances.**

Get the Most out of your GHL Product

GHL products are well-equipped with simple and intuitive features. In order to get the most out of our products, we recommend you read our Programming Guide and Instruction Manual together. Doing so will provide you with the most profound details for using our product. These documents can be downloaded from our website's download area (*Support->Downloads*). Visit our homepage at www.aquariumcomputer.com , our Support forum or visit us on Facebook to become a GHL-Product expert and fully utilize the full range of functions offered from your device!

About this Programming Guide

The information provided by this guide is primarily based on setup and configuration via the *Mitras LX7* control panel. When you configure the *LX7* via *GHL Control Center*, setup will slightly differ from the descriptions shown in this guide. Individual settings are however, identically displayed on the device and *GHL Control Center*.

Please read these instructions carefully before operating the *Mitras LX7*.

GHL products are built with maximum security and safety in mind. However, product safety for this device can only be guaranteed if you follow these guidelines.

Anyone who uses this device must become familiar with the following safety instructions and the operation of the device.

Failure to follow these instructions will void any warranty claims.

In this manual, the following symbols are used:



TIP

General note, tip or advice.




WARNING

Important note for operation, to avoid damage to the equipment, and for your safety.

**DANGER**

Warning that non-compliance can result in injury or damage to the device.

Safety Instructions

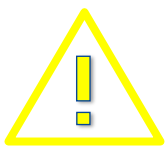**WARNING**

This equipment must not be used:

- By small children and vulnerable persons with limited physical, sensory or mental capabilities.
- By people who are unfamiliar with the functions of this product.

**DANGER**

- Never leave your aquarium unsupervised for an extended amount of time.
- Always remember that technologies can fail and therefore, malfunctions can never be ruled out!
Power failures, incorrect settings, damage (For example, by water or overvoltage) or simply an unexpected operating situation can lead to fatal damage.
- The manufacturer disclaims any liability for (consequential) damages or losses which might arise in connection with the use of the *ProfiLux System* extent legally permissible.

Intended Use

The *Mitras LX7* is intended exclusively for use in the domestic area. *Mitras LX7* may only be operated with GHL accessories.

Make sure to place the device away from splashing water, moisture or other liquids.

The luminaire is to be used exclusively for illuminating open aquariums in dry indoor areas.

For your own safety, please look at the hazard prevention and safety instructions in the chapters that follow and in the *Mitras LX7* Instruction Manual.

1 Clock

Use the clock feature to make changes to all time-related settings. *Mitras LX7* uses the astronomical hour count which divides the day into 24 h.

1.1 Time & Date

This option allows you to optimize the speed of the internal clock by entering a *correction per day* ranging from -59s to 59s (Optional).

At 0s (default setting), the clock runs without correction. At any other correction, the adjusted second number is added (or subtracted) once per day.

After changing these settings, you can then set the date and time manually.



TIP

If you have several *Mitras® LX7* in-use, you can conveniently adjust your settings from one luminaire. Once settings are saved, the settings are automatically transmitted to the other luminaires.

Assign one luminaire as a master (Menu: System-> Wireless) and the others as slaves. Each luminaire should also be assigned a different address (No.1-31).

The settings of the master are then transmitted via radio to the other luminaires.

1.2 Location

The coordinates (Longitude and Latitude) of your location can be entered here. This information will be used for further simulations in the future.

From the factory, this is 49.4 ° N and 7.8 ° E - the coordinates of Kaiserslautern in Germany - the production location of your *Mitras LX7*.

2 Illumination

This menu contains all lighting-related settings and functions.



TIP

Master and Slave modes are ideal for running simulations across all luminaires. These simulations can be performed across one or more

luminaire:

- Gliding cloud simulation
- Sunrise and sunset with east-west simulation
- Thunderstorm

Simulations and Illumination runs can only be assigned to a master or stand-alone luminaire. Slave luminaires receive these settings via radio transmission from the Master.



TIP

To create/edit your Illumination run, we recommend using *GCC Light Composer*. Light Composer provides the quickest solution for creating your own lighting schedule.

The Light Composer calculates the individual lighting channels by means of the desired brightness and color sequence over the day.

Find detailed information, please refer to the *Mitras LX7* instruction manual, ready for download on our homepage (*Support->Downloads*) www.aquariumcomputer.com.

2.1 Adjusting an Illumination Run on the Luminaire

2.1.1 Settings for the Slave Light

With a slave light, only the *time difference* to the master can be set in the range of -60 to +60 minutes. Slave lights follow the simulations of the master light, with a negative time difference.

Negative time difference means, the slave lights illumination processes starts earlier or later as the master lights. This setting can be used to simulate a sunrise over the aquarium.

For example, the sunrise is set to move across 3 lights within 10 minutes.

Light Left: Slave with time difference -5 minutes

Light Center: Master

Light Right: Slave with time difference +5 minutes

2.1.2 Settings for Master and Stand Alone Lights

First select the illumination channel to be edited.

The channels to choose from are: *Blue, Royal blue, Cool white, Blue white, True green, Hyper red, Sky white, Ultraviolet and Hyperviolet.*

First you have to specify whether the luminaires should run in *Automatic Mode* or not. If not, this illumination channel is in *Manual mode* and not dimmed automatically.

In the next step the illumination run is to be determined.

Enter the number of *dim-points* for which you want to adjust the brightness (up to 24).

For each *dim-point*, set the following:

Time - At this time, the lighting channel should have the following brightness

Brightness (0% - 100%) - Brightness of the illumination channel at this time



TIP

The brightness curve between the individual dim-points is calculated automatically.

If you would like to have the moon phase simulation affect this illumination channel, tick the *Moon* checkbox.

2.2 Manual Illumination

The setting of the manual brightness is only available for master and stand-alone luminaires. If the luminaire is a master, the corresponding slave lamps are synchronously controlled.

This menu is mainly used for test and diagnostic purposes. With the arrow keys on the left and the arrow on the right, you can select the lighting channel whose brightness you want to adjust, 4 channels are displayed simultaneously. Use the up/down arrows to make the selected channel brighter or darker.

The symbols displayed to the left and right of the selected channel have the following meanings:

Symbol	Meaning
↑	Dimmable only upwards (at 0%)
↓	Dimmable only downwards (at 100%)
↑↓	Dimmable in both directions

Save your settings and exit the manual brightness setting by selecting **Esc**.

2.3 Clouds

Mitras LX7 can simulate passing clouds by using a random generator. When a cloud passes, all of the involved luminaires temporarily become darker as the simulation goes through its effect. With *Mitras LX7*, you can also create a gliding clouds simulation over several luminaires.

2.3.1 Settings for the Slave Light

With a slave light, only the *time difference* to the master can be set with a range of -45s +45s. Slave lights follow the simulations of the master light, with a negative time difference.

This means the cloud (simulation) from the slave light starts earlier or later than the cloud (simulation) from the master light.

With this function, over the aquarium gliding clouds can be simulated.

For example, within 30 seconds, a cloud should glide across 3 lights.

Left light: Slave with time difference -15 seconds

Light center: Master

Light Right: Slave with time difference +15 seconds

2.3.2 Settings for Master and Stand Alone Light

The *maximum Waiting time* (0s - 100s) determines how long the time intervals between clouds should be (with 0s, the cloud simulation is disabled). The random number generator waits between 1s and the *maximum Waiting time* until a new cloud is generated.

Furthermore, the *minimum and maximum cloud duration* as well as the maximum darkening (10% - 95%) are to be set. The random generator generates new clouds taking these values into account.

The cloud simulation can also be tied-in with other simulations.

2.4 Moon

This function is only available for master and stand-alone luminaires. Slave lights follow the simulations of the master light.

Mitras LX7 simulates the moon phases depending on the date.

In reality, the lunar cycle is a very complex matter:

- Thus the distances vary from new moon to new moon. On average it is about 29.5 days.
- Likewise, the moonrise time as well as the distance to the earth differ respectively.
- It is not the fact that at half-moon the moon has 50% of its brightness. We consider on average about 25%.

Our lunar phase simulation does not aim to replicate these complex sequences in every detail. For us, it was important to produce a repeating moonlight sequence which would illuminate the aquarium somewhat differently day-to-day. We've implemented such features to provide a certain rhythm which would largely be in harmony with nature.

Lunar phases in the *Mitras LX7* are based on the calendar date so that full moon and new moon phases always correspond to the actual (real) lunar phase with a deviation of one day or less.

You can set the time when the lunar phase simulation is active. In order for the lunar phase simulation to function, it must first be activated in the desired lighting channels.

For the selected lighting channels, the following happens within the set time: The brightness (given by the set illumination run) is multiplied by the calculated moon phase brightness. The illumination run is therefore still taken into account.

The result is for example, at half-moon (= 50% lunar phase, 25% lunar brightness) and a brightness of 30% (given by the illumination run). A luminaire brightness of $25\% * 30\% = 7.5\%$.

Illumination channels, without activated moon phase are not affected and follow their lighting curves as normal.

Outside of the set simulation time, no illumination is influenced by the lunar phase simulation.

With this method, it is possible to normally operate a lighting channel during the day (outside the set simulation time/no influence of the lunar phase) and in the evening with the moon phase (within the set simulation time).

The start and end-time of the lunar phase simulation should be created so that the night illumination interval of the assigning lighting is included.

If the illumination of a luminaire, e.g. Is programmed to illuminate as moonlight from 19:00 (7:00pm) to 7:00 (am), moon phase simulations should also be set from 19:00 (7:00pm) to 7:00(am).

The lunar phase simulation can also be tied-in with other simulations.

2.5 Rainy Days

This function is only available for master and standalone lights. Slave lights follow the simulations of the master light.

Mitras LX7 allows the programming of "Rainy days". On a rainy day, the lighting intensity is reduced by an adjustable value.

With this feature, you have the option to set the weekdays for which *Rainy Days* should be enabled. Once the days have been selected, the darkening of the day has to be set (0% - 100%).

The Rainy days simulation also takes other simulations into account.

2.6 Thunderstorms

This function is only available for master and standalone lights. Slave lights follow the simulations of the master light.

Mitras LX7 can simulate an authentic thunderstorm.

When a thunderstorm simulation is in-effect, a slow reduction of all LED channels will occur. As these channels become darker, the number of flashes will increase. After the thunderstorm has reached its climax, the lighting is slowly brought back to normal strength, the flashes become less frequent until finally the thunderstorm is over.

A thunderstorm can be started manually any number of times or automatically up to 4 times per day. There is also an option to start a thunderstorm at random.

Set the thunderstorm parameters in the *Storm* menu:

Darkening (0% - 100%) during a thunderstorm

Intensity (1 – 20) of the thunderstorm – Higher numbers, the more flashes are generated

Flash brightness (10% - 100%) – Determines the LED output power during a flash

Thunderstorm/Day – Number of automatically generated thunderstorms in a day (max. 4)

Weekdays – Only on these weekdays there is a thunderstorm

Start 1...4 – A thunderstorm begins at this time

Duration 1...4 – Duration of a thunderstorm (1 to 60 minutes)

Random thunderstorm duration – If you want random thunderstorms, enter a duration (max. 60 minutes) for the random thunderstorm (If you enter 0, randomly generated thunderstorms are disabled).

Waiting time minimal and maximal – the random generator determines a waiting time within these limits (maximum 240 hours) until the next random storm is started.

In the *Thunderstorm menu*, a thunderstorm could be manually started by selecting *Manual Start*. The duration (1 to 60 minutes) must then be entered here. When a manual thunderstorm is triggered, the stored thunderstorm intensity and darkening *Settings* are used.

2.7 Light Demo

Light demo is useful for demonstration purposes. After activation, the LEDs are alternately dimmed upwards and downwards.

With the key of the control panel the light demo can be varied:

Arrows up and down - Color change faster or slower

Arrows left and right - Change the color pattern

Return - Freeze the current color pattern, press Return again restarts the automatic sequence

2.8 Acclimation

The acclimation function provides a simple and comfortable way to automatically change the brightness of the light over a span of several days. We recommend using this simulation for acclimating corals/plants to a new lighting program or when corals have been newly brought in.

After activating, the following settings can be made:

Start date – The acclimation period begins on this day

Start percent- With this value, all dimmable lights are multiplied at the beginning of the acclimation

End date - The acclimation period ends on this day

End percent - With this value, all dimmable lights are multiplied at the beginning of the acclimation

During acclimatization, a dimming factor is calculated daily. The individual illumination runs are converted according to this factor.

Example: Start on 01.12.2016 (12-01-2016) with 50%, end on 03.12.2016 (12-03-2016) with 100%

Then the lighting channels are operated with 50% of the normally set brightness on the 01.12.2016 (and also before), on the second day with 75%, and on the last day with 100% (and also thereafter).

Starting and ending percentages can be adjusted as needed; thus an increase as well as a lowering over a certain period of time is possible.



TIP

The acclimation function currently cannot be set on the device itself. Please use *GHL Control Center* for this purpose.

3 Extras

Special functions and settings are summarized here. The following submenus are viewable:

3.1 Info & Support

After selecting this menu item, information about the firmware version, model and our homepage is displayed one after the other (automatically after a certain time or after pushing a button).

3.2 Language

The language in which Mitras LX7 displays texts can be set here.



TIP

If *Mitras LX7* is set to German, this menu appears under *Extras-> Sprache*. Select this option to change the language.

3.3 Display

The brightness of the display and control panel lighting can be adjusted here.

Display bright (0% - 100%) determines the display brightness during the day

Display dark (0% - 100%) determines the brightness of the display at night

Display dark Start and *End* determine the time in which the display is to be dimmed.

3.4 Maintenance

During maintenance and care of the aquarium, it is possible to reduce the brightness of luminaires. For example, to 80%.

Mitras LX7 offers 4 separately adjustable maintenance programs. The settings must be set via the GCC.

4 System

All system functions and system settings, e.g. the hardware configuration are pooled here. The following submenus can be called.

4.1 Factory Settings

After selecting this function, you are asked if you want to restore factory settings. If this is confirmed, all settings are reset to the delivery state.

4.2 PIN

A personal identification number (PIN) is used to protect the device against unauthorized changes. Factory default is set to 0000. If the PIN is set to 0000, all changes can be made without entering a PIN. As soon as the PIN is unequal to 0000, this PIN must be entered before each setting. This also applies to the PIN change.



TIP

If you forgot your PIN

Switch off the device (disconnect the voltage supply), switch it on again (plug in the voltage supply again). Immediately, while the status and greetings screen is displayed, press the left arrow.

You will be asked: *Are you going to delete the PIN?*

After confirmation with *Yes*, the PIN is reset to factory default (0000 - deactivated).

4.3 Energy Options

Select between following modes:

All LEDs off - Disables all channels

High Efficiency - High light output with good efficiency - preferred setting

High Output - Maximum light output with slightly lower efficiency

Furthermore, the *maximum Output power* (10% - 100%) of all channels can be set.

With this, it is possible to dim down all channels equally without having to change the individual illumination runs.

The *maximum Temperature* (55 °C - 65 °C) determines from which heat sink temperature the power is reduced to prevent a further temperature increase.

The *maximum Fan speed* (60% - 100%) determines how fast the fans are allowed to run at most. The setting depends on whether a low noise level or a maximum light output should have priority.

4.4 Wireless

Luminaires can communicate with one another, e.g. to synchronize lighting processes via the integrated radio module.

The following modes can be selected:

Standalone - This lamp works alone, the radio module is not used.

Master - This lamp controls slave lights of the same group.

Slave - This light is controlled by a master in the same group (many settings are then not required because they are carried out by the master).

Wireless address – All wireless devices of a group (a group consists of a Master and at least one Slave) must have different wireless addresses (Example: Master = 1, first Slave = 2, second Slave = 3 etc.)

Wireless channel (11 – 26) – All wireless devices of a group must use the same *wireless channel*. The *wireless channel* can be changed in the event of interference from other transmitters (e.g. WLAN or Bluetooth) or when several independent *Mitras LX7* groups are to be operated